351 Series Non Handed Door Closer Standard Mount Top Jamb Mount Parallel Arm Mount

Hold Open Arm Models

Adjustable (Sizes 1-6)



25-H 25-HZ 25-HZA 25-PH9



This product can expose you to lead which is known to the state of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65warnings.ca.gov.

Ce produit peut vous exposer au plomb qui, dans l'état de la Californie, est reconnu pour causer le cancer, des anomalies congénitales ou d'autres problèmes de reproduction. Pour plus d'informations, visitez: www.P65warnings.ca.gov.



1-800-438-1951 • www.sargentlock.com

A7341B



ATTENTION:

An incorrectly installed or improperly adjusted door closer can cause property damage or personal injury. These installation instructions should be followed to avoid the possibility of misapplication or misadjustment.

- For special applications, a separate door and frame preparation template is packed with these instructions. Use this instruction sheet for installation sequence and closer adjustments only.
- Doors should be hung on ball bearing or anti-friction hinges.
- A separate door stop is recommended.

- Always consult door/frame manufacturer for fastener compatibility.
- Door and frame must be properly reinforced.
- Adjust closing time speed between 3 and 6 seconds from 90° to Close. Greater closing times may be required for elderly or handicapped.
- DO NOT install closer on exposed side (weather side) of exterior doors. Warranty will be void.
- Dimensions are given in inches (millimeters).

*Mounting Hardware		Door or Frame	Drill	
	Case, Foot or Optional PH9 Bracket: #12 x 1-1/2 Phillips Flat Head Self Drilling Tapping Screw	Wood	3/32" (2.38mm)	
	Case, Foot or Optional PH9 Bracket: #12 x 1-1/2 Phillips Flat Head Wood Screw			
	Case, Foot or Optional PH9 Bracket: #12-24 x 5/8 Phillips Flat Head Machine Screw	Metal	Drill #16 (.177) Tap 12-24	
	Case and/or Foot: Mortise Nut (optional)	Hollow Metal	1/4" (6.00mm) thru 3/8" (9.50mm) door face opposite to closer	
		Aluminum or Wood	3/8" (9.50mm) thru	

* Security Torx screws supplied upon request, not shown

Mortise Nut and Screw Detail

Top jamb application: Door closer foot will be attached to the door in a manner similar to that shown for mounting the case.

Appropriate mortise nuts and screws will be supplied based on door thickness.

Door construction must provide a bridge type reinforcement to prevent the door rail from collapsing when screws are tightened.

If distance between door stop and center of mortise nut head is less than 7/8" (22mm), stop must be cut to clear head or head must be recessed (shown).



Accessories



351A Mounting Plate Allows mounting onto a door with a minimum top rail of 2-3/8" (60) or top jamb with 1-3/4" (44) minimum frame clearance



351B Mounting Plate Top Jamb Mount For low ceiling conditions or minimum 1-15/16" (49) frame face



351D Drop Plate Parallel Arm Mount For narrow top rail conditions 3" (76) minimum top rail required

1-800-438-1951 • www.sargentlock.com

Copyright © 2007, 2008, 2020 SARGENT Manufacturing Company, an ASSA ABLOY Group company. All rights reserved. Reproduction in whole or in part without the express written permission of SARGENT Manufacture proved ibite 2020-01-21 2

Experience a safer and more open world

351 Standard Mount - H Arm Installation (Right Hand Shown)



1. Prepare door and frame.



2. Mount case to door.



Arm Type	Mounting	Max Door Opening	**Dim A	**Dim B
H Holder	Standard	110°	9-1/2" (241)	12-3/4" (324)
	Alternate	*160°	6-1/2" (165)	9-3/4" (248)

NOTES:

3a. Remove dial

from foot.

- 1. IMPORTANT: Use Alternate mounting if door can open beyond limits shown for standard mounting.
- 2. *If butt, frame, and wall conditions permit, door will open 180°.
- 3. ** Dimension is taken from hinge edge of door for invisible hinges. Butt, offset, swing clear, center hung or invisible hinges.
- 4. Use screws provided or use mortise nuts when required. See chart on page 2.



4. Connect arms, preload spring 5. Set Hold Open. Keep door open in position until dial screw secures dial. and tighten screw. 90° - 160° 90° - 160° 1st 1st 1st 3rd Secure arms with Swivel 2nd Arm Screw. 2nd 2nd 90 3rd 3rd RH: LH: Counter (i) Clockwise clockwise to Rotate elbow until to tighten. tighten. **Rotating Main arm** Foot Assembly arm preloads closer is perpendicular to frame. spring power. You've installed the 351 Hold Open Closer - Standard Mount.

Go to page 7 for closer adjustments and cover installation.

1-800-438-1951 • www.sargentlock.com

351 Top Jamb Mount - H, HZ, HZA Arm Installation (Right Hand Shown)

SARGE ASSA ABLOY





NOTES:



- 2. ** Door opening to 180° is possible if depth of reveal is not greater than 2" (51).
- 3. 351A Mounting Plate required for double rabbeted frame.
- 4. Use screws provided or use mortise nuts when required. See chart on page 2.





- 4. Connect arms, preload spring and tighten screw.
- 5. Set Hold Open.
- Keep door open in position until dial screw secures dial.



You've now installed the 351 Hold Open Closer - Top Jamb Mount. Go to page 7 for closer adjustments and cover installation.

1-800-438-1951 • www.sargentlock.com

Copyright © 2007, 2008, 2020 SARGENT Manufacturing Company, an ASSA ABLOY Group company. All rights reserved. Reproduction in whole or in part without the express written permission of SARGENT Manufactu Approved ibite 2020-01-21

Experience a safer and more open world

Arm Type	Reveal Depth	**Door Opening	
H Arm	0" to 2" (0 to 51)	140°	
HZ Arm	2-1/8" to 5" (54 to 127)	140°	
HZA Arm	5-1/8" to 8" (130 to 203)	140°	



2-1/8

(54)

13/16

(21)

3-3/8

(86)

3a. Remove dial





351 Parallel Arm Mount - PH9 Arm Installation (Right Hand Shown)



1. Prepare door and frame.



- E Install fact accombly to fact bracks
- 5. Install foot assembly to foot bracket and case to door.



6. Rotate bottom case spindle.





7. Attach Main arm as shown.

8. Open latching speed and closing speed valves.



You've now installed the **351 Hold Open Closer - Parallel Arm Mount.** • Go to page 7 for closer adjustments and cover installation.

1-800-438-1951 • www.sargentlock.com

351 Hold Open Closer

ASSA ABLOY

Closer Adjustments

Use provided 1/8" hex wrench to turn valves. NEVER force valves out of closer. NEVER completely close backcheck valve. NEVER use backcheck as a door stop.



Door must be open to adjust spring closing power. Use 5/8" wrench or socket to turn screw. Refer to chart. Do not use a power drill. Warranty will be void.

Adjust closing time speed between 3 and 6 seconds from 90° to Close. Greater closing times may be required for elderly or handicapped.

1 If interior doors do not have to comply with ADA requirements, exterior door settings are recommended. Where strong drafts exist, increase spring power as needed by turning spring adjustment screw clockwise. If necessary, reduce spring power by turning screw counter clockwise.

		7				
	Number of Spring Power Nut Turns From Factory Setting (Use as Guide ONLY)					
	DoorWidth	Exterior		Interior 去		
	Door Width	Std/Top Jamb	Parallel	Std/Top Jamb	Parallel	
	24"	Factory Set	2-6 CW			
	30"	1-4 CW	2-0 CVV	1-5 CCW	1-5 CCW	
Increase Power + Decrease Power -	32"		6-8 CW			
	36"	4-7 CW				
	40"		8-11 CW		Factory Set	
	42"	7-10 CW		Factory Set		
	44"					
	46"		11-13 CW	1-5 CW	1-7 CW	
	48"		11-13 CVV	1-3 CVV		
	over 48"	up to 18	3 CW	5 CW & up	8 CW & up	

Cover Attachment





Standard Mount shown Parallel Arm Mount similar





1-800-438-1951 • www.sargentlock.com

Experience a safer and more open world The ASSA ABLOY Group is the global leader in access solutions. Every day we help people feel safe, secure and experience a more open world.



SARGENT Manufacturing Company 100 Sargent Drive New Haven, CT 06511 USA 800-727-5477

www.sargentlock.com

Copyright © 2007, 2008, 2020, Sargent Manufacturing Company, an ASSA ABLOY Group company. All rights reserved. Reproduction in whole or in part without the express written permission of Sargent Manufacturing Company is prohibited.