
Installation Instructions


7893 & 8293

Dummy Trim (One Side)

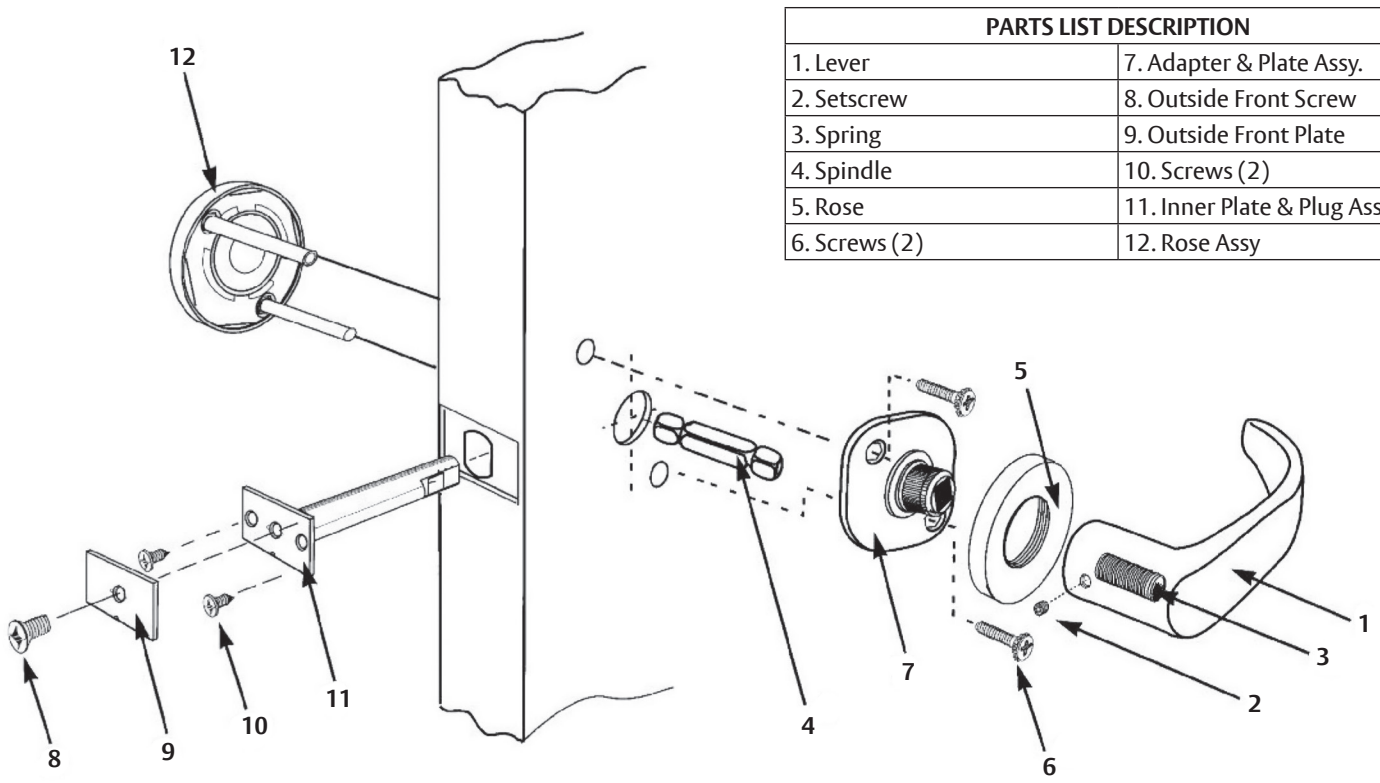

PARTS LIST DESCRIPTION	
1. Lever	7. Adapter & Plate Assy.
2. Setscrew	8. Outside Front Screw
3. Spring	9. Outside Front Plate
4. Spindle	10. Screws (2)
5. Rose	11. Inner Plate & Plug Assy.
6. Screws (2)	12. Rose Assy

If knobes are used instead of lever handles, installation is the same.

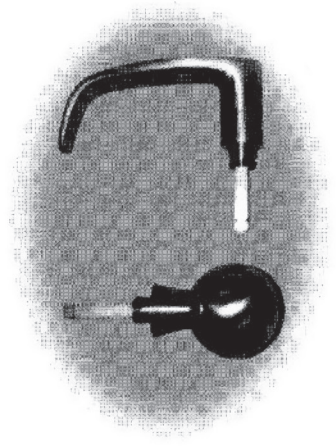

A. Install Inner Plate & Plug

1. Install inner plate and plug assembly into the edge of the door. Install screws into plate. **Do not tighten screws at this time.**
2. Insert spindle into plate and plug assembly.

2. Install Rose Assembly

1. Install rose assembly with mounting posts attached into the thru-bolt holes in the door.
2. Install adapter plate using the screws with lockwashers attached to the rose assembly.
3. Screw the rose to the adapter plate and install lever using 1/8" hex wrench.

3. Install Outside Front

1. Tighten screws to inner plug and plate assembly and install outside front plate.


⚠ WARNING
This product can expose you to lead which is known to the state of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65warnings.ca.gov.

⚠ WARNING
Attention Installer: Improper installation may result in damage to the product and void the factory warranty.

Installation Instructions

7894 & 8294


Dummy Trim (Both Side)

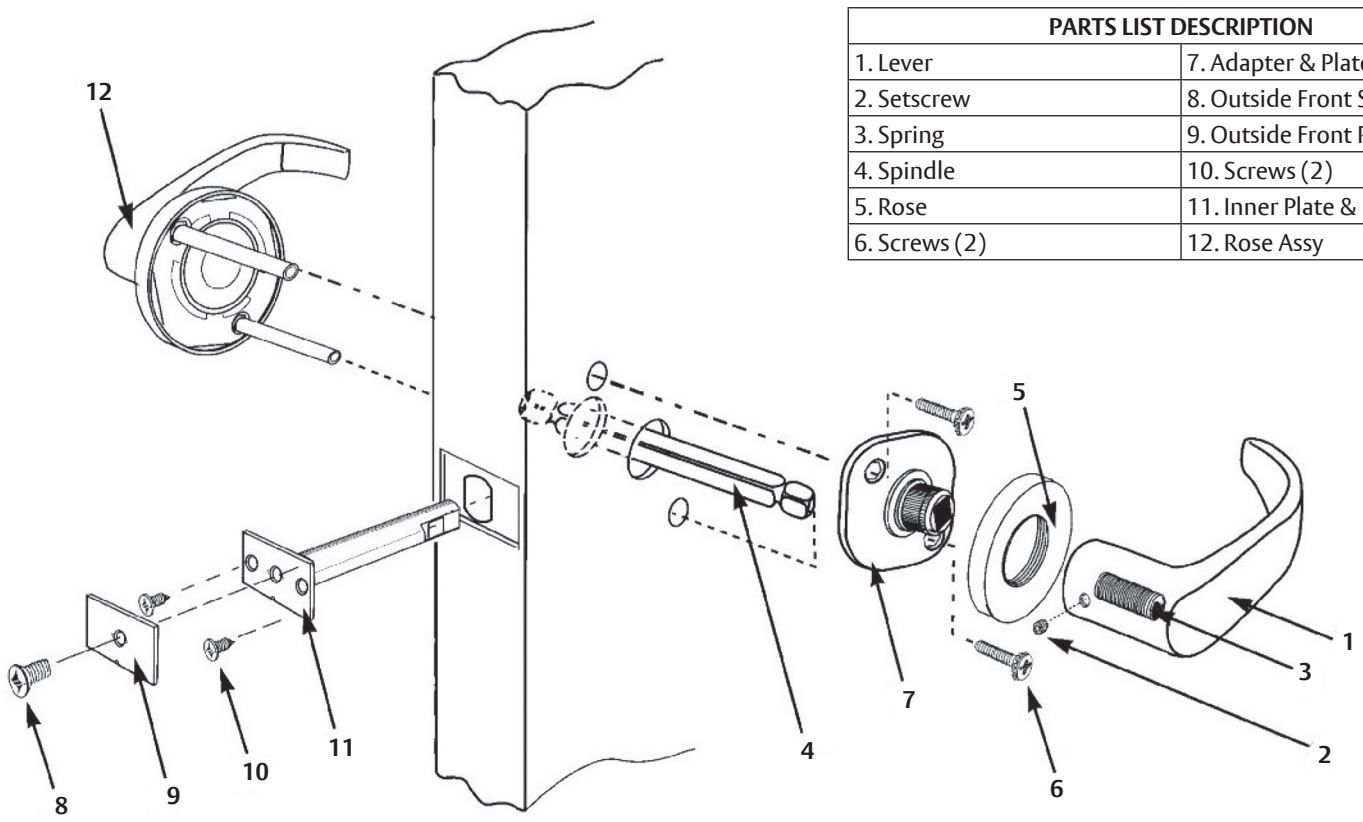

PARTS LIST DESCRIPTION	
1. Lever	7. Adapter & Plate Assy.
2. Setscrew	8. Outside Front Screw
3. Spring	9. Outside Front Plate
4. Spindle	10. Screws (2)
5. Rose	11. Inner Plate & Plug Assy.
6. Screws (2)	12. Rose Assy

Inactive Door Preparation

Must be set 1/16" deeper than top surface to accomadate inner and outer plates.

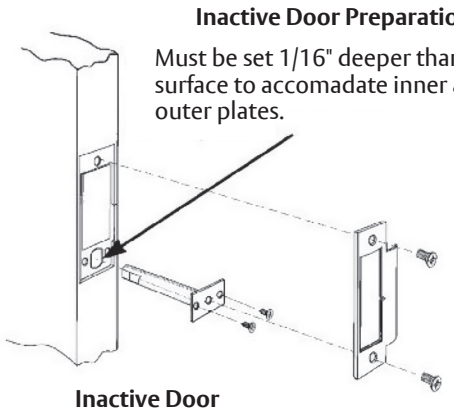

Inactive Door

A. Install Inner Plate & Plug

1. Install inner plate and plug assembly into the edge of the door. Install screws into plate. **Do not tighten screws at this time.**
2. Insert spindle into plate and plug assembly.

2. Install Rose Assembly

1. Install rose assembly with mounting posts attached into the thru-bolt holes in the door.
2. Install adapter plate using the screws with lockwashers attached to the rose and lever assembly.
3. Screw the rose to the adapter plate and install lever using 1/8" hex wrench.

3. Install Outside Front

1. Tighten screws to inner plate and plug assembly and install outside front plate.

1-800-727-5477 • www.sargentlock.com

Copyright © 2009, 2024, SARGENT Manufacturing Company. All rights reserved. Reproduction in whole or in part without the express written permission of SARGENT Manufacturing Company is prohibited. Patent pending and/or patent www.assaabloydss.com/patents.

A7036 05/24 Rev 2

Experience a safer and more open world