


0195 PIVOT SET, 3/4" OFFSET, HANDED

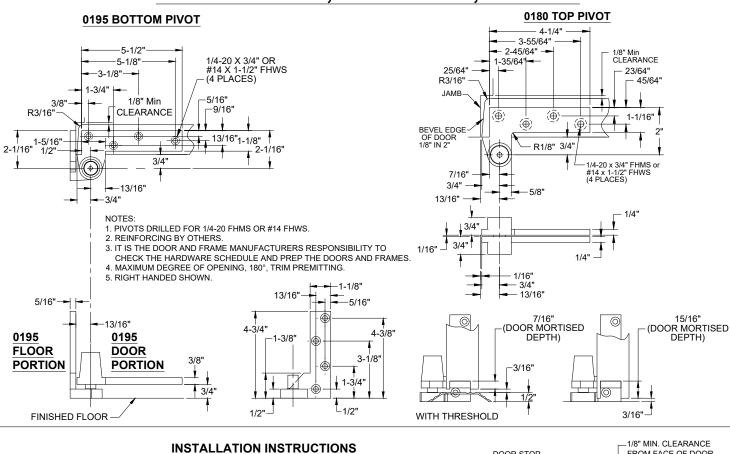

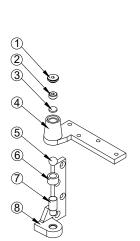

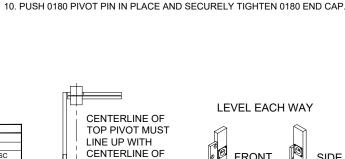



1. MEASURE 13/16" OUT FROM DOOR JAMB

CENTERLINE OF THE PIVOT POINT.

IN BOTH DIRECTIONS PER ILLUSTRATION.

5. INSTALL 0180 DOOR PORTION PER TEMPLATE

6. INSTALL 0180 JAMB PORTION PER TEMPLATE.

7. INSTALL 0195 DOOR PORTION PER TEMPLATE.

PIVOT ARM.

9. SET DOOR ON 0195 BOTTOM PIVOT JAMB PORTION.


2. ALLOW 1/8" MIN CLEARANCE FROM DOOR STOP TO DOOR


4. 0195 FLOOR PORTION MUST BE INSTALLED COMPLETELY LEVEL


8. IF 019 INTERMEDIATE PIVOT IS USED. SEE SEPARATE TEMPLATE.

FACE. MEASURE DOOR THICKNESS AND ADD 3/4".

3. WHERE THESE LINES INTERSECT DETERMINES THE

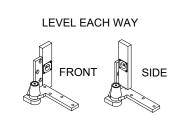

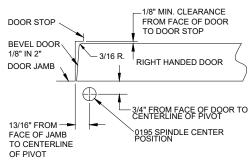

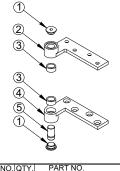

ITEM NO.	QTY.	PART NO.
1	2	0180 END CAP
2	1	0180 JAMB PORTION
3	2	0180 NEEDLE BEARING
4	1	0180 DOOR PORTION
5	1	0180 PIVOT PIN

Disclaimer: This template is to be used for installation, as shown, of said product and is not suitable for every application method. Custom applications, where door sizes, weights and conflicting hardware are a factor, need to be addressed with ABH and proper instructions provided. ABH is not liable for failure or performance of the product due to improper installation methods and/or use. Improper use and/or installation of this product will void the standard warranty.



www.abhmfg.com E-mail: abhinfo@abhmfg.com Architectural Builders Hardware Mfg., Inc. 1222 Ardmore Ave., Itasca, IL 60143 630.875.9900; FAX 800.9FAXABH (932.9224)

(c) 2020 ABH Mfg., Inc.

0195 PAGE 1 OF 1 **REVISED 08-28-20**

0195-03 DWG