



9245

Intumescent Door Bottom Shoe, Up to 1½" — 45 Minute

For the complete list of GapGuard Fire Door Accessories, the most up-to-date product information and installation instructions, scan the QR code or visit ngp.com.



INSTALLATION INSTRUCTION

Gap Solution for Excessive Fire Door Bottom Undercut/Clearance up to 45 Minute NGP-Edge® Intumescent Door Shoe



UL CERTIFIED FOR USE IN
THE US AND CANADA

Limitations & Allowances:

- For Use on up to 45 Minute UL10B and UL10C Wood or Hollow Metal Fire Doors with Bottom Clearance Exceeding ¾", up to 1½"
- UL Certified for 45 Minute Fire Doors with Bottom Clearance Up to 1½"

Installation Procedure:



1. Measure and cut metal retainer and gasketing insert to fit.
2. Position seal on door. Adjust position so sweep does not impede proper closing and latching of door.
3. Mark screw holes.
4. Drill pilot holes with a 7/64" bit.
5. Install with screws provided.
6. Install end caps if desired - as illustrated.



9245V



9245WH

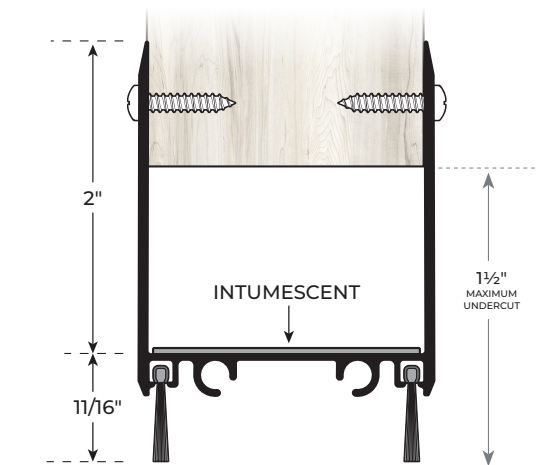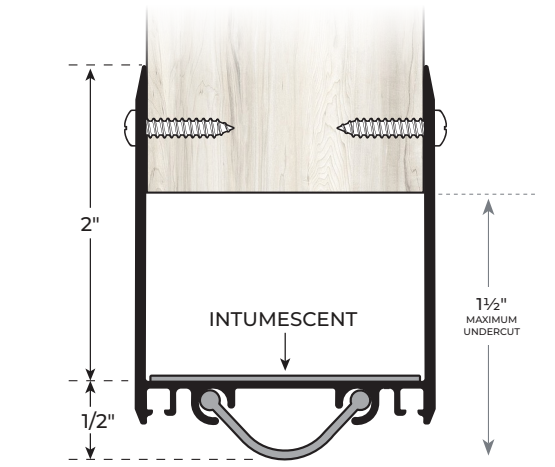

NGP-GAP-9245-PRI-0126-A



MEMPHIS | CARSON CITY

NATIONAL GUARD PRODUCTS, INC.

MEMPHIS

4985 East Raines Road
Memphis, TN 38118

CARSON CITY

3689 Arrowhead Drive
Carson City, NV 89706

Fax: (800) 255-7874

Email: info@ngp.com

Quotes: quotes@ngp.com

Orders: orders@ngp.com

ngp.com
1-800-NGP-RUSH