



9590


Fire Door Bottom Gap Solutions—Up To 180 Minutes

INSTALLATION INSTRUCTION

For the complete list of GapGuard Fire Door Accessories, the most up-to-date product information and installation instructions, scan the QR code or visit ngp.com.



WOOD DOOR INSTALLATION SHOWN

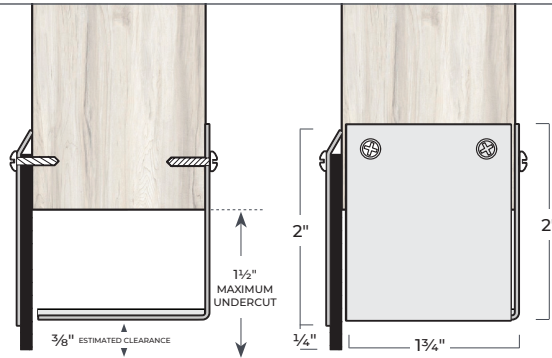

⚠ WARNING:
*Neoprene products can expose you to chemicals including chloroprene, which is known to the State of California to cause cancer and/or developmental and reproductive harm. For more information, go to P65Warnings.ca.gov.
Patent Pending.*

UL Certified for use on up to 180 minute UL10B and UL10C wood or hollow metal fire doors with bottom clearance exceeding 3/4": 9590: up to 1 1/2".



POSITIVE PRESSURE TESTED
MISCELLANEOUS FIRE DOOR
ACCESSORY

5.26

Installation Instructions

L-Shaped Bottom with Intumescent (Push Side Mount):

1. Cut to fit.
2. Prep for any bottom latching hardware (ie: Concealed Vertical Rod Exit Device latch or Automatic Flush Bolt) that is installed in accordance with manufacturer's installation instructions.
3. Close door. Hold at bottom of door with 3/8" clearance above sill or floor.
4. Mark screw holes.
5. Drill pilot holes for screws using a 7/64" drill bit.
6. Install with screws provided.
7. Adjust position to 3/8" clearance above sill or floor.

Door Sweep (Pull Side Mount):

1. Cut sweep to fit.
2. Close door. Hold sweeps at bottom of door. Tap down until contact is made between the sweeps and threshold.
3. Mark screw holes.
4. Drill pilot holes for screws using a 7/64" drill bit.
5. Install with screws provided.
6. Adjust position so sweeps do not impede proper closing and latching of door.
7. Install end caps if desired - as illustrated.

NGP-GAP-9590-PRI-0526-A



MEMPHIS | CARSON CITY

NATIONAL GUARD PRODUCTS, INC.

MEMPHIS

4985 East Raines Road
Memphis, TN 38118
orders@ngp.com

CARSON CITY

3689 Arrowhead Drive
Carson City, NV 89706
carsonorders@ngp.com

Fax: (800) 255-7874
Email: info@ngp.com
Quotes: quotes@ngp.com

ngp.com
1-800-NGP-RUSH