

GUIDE FOR ORDERING SKIRTS

TO ADAPT RECESSED EQUIPMENT TO SEMI-RECESSED OR SURFACE-MOUNTED

Recessed Model No.	Actual Depth of Cabinet	For Semi-Recessing, Order			For Surface-Mounted Skirt, Order
		2" Skirt	4" Skirt	6" Skirt	
B-3091	3-5/8" (92mm)	—	—	—	3699-57
B-3091.MBLK	3-5/8" (92mm)	—	—	—	3699.MBLK-57
B-3092	3-5/8" (92mm)	—	—	—	3699-57
B-3092.MBLK	3-5/8" (92mm)	—	—	—	3699.MBLK-57
B-3513		—	—	—	35139-53
B-3513.MBLK		—	—	—	35139-53-MBLK
B-359	4" (102mm)	—	—	—	—
B-3474	4" (102mm)	3662-9	—	—	3309-9
B-3574	4" (102mm)	3662-9	—	—	3309-9
B-35633		—	—	—	35639-53
B-35643	8-3/8" (212mm)	—	—	—	35649-53
B-35883		—	—	—	3588-53
B-35883.MBLK		—	—	—	3588.MBLK-53
B-359033		—	—	—	359039-53
B-359039		—	—	—	359039-53
B-3644 Series	4" (102mm)	3662-9	—	—	3309-9
B-369	4" (102mm)	—	—	—	3699-57
B-3706	5-1/2" (139mm)	—	—	—	For surface mounting, remove recessing flange
B-37063	5-9/16" (141mm)	370634-17	—	370639-18	—
B-37063.MBLK	5-9/16" (141mm)	370634.MBLK-17	—	370639.MBLK-18	—
B-3803	5-15/16" (151mm)	38032-57	—	—	—
B-38030	4-1/2" (114mm)	—	38030-98	—	—
B-38034	3-5/8" (92mm)	—	—	—	380349-57
B-38034.MBLK	3-5/8" (92mm)	—	—	—	380349.MBLK-57
B-39003 Series	7-5/8" (194mm)	—	3949-57	—	—
B-39003.MBLK	7-5/8" (194mm)	—	3949.MBLK-57	—	—
B-3944 Series	4" (102mm)	3942-57	—	—	3949-57
B-3961	4" (102mm)	3942-57	—	—	3949-57
B-39617	8-1/8" (206mm)	—	3949-57	—	—
B-3974	4" (102mm)	3942-57	—	—	3949-57
B-4369		—	—	—	43699-19
B-43944		—	—	—	43949-19
B-4706	5-9/16" (141mm)	47064-17	—	—	47069-18

The word Series in most cases applies to cabinets in a product category having identical height, width, and depth.

TrimLine™ Models B-3803, B-38034, and B-39003 should be shimmed with washers between back of cabinet and wall support backing to fill space. This avoids distortion of cabinet back.

GUIDE FOR ORDERING SKIRTS

TO ADAPT RECESSED EQUIPMENT TO SEMI-RECESSED OR SURFACE-MOUNTED

SKIRT INSTALLATION


Slip skirt over back of cabinet, fitting it snug against back of cabinet flange.

On recessed units to be semi-recessed, verify that existing mounting holes are clear of the skirt. If the holes do not clear the skirt then drill new mounting holes that will put screws into the framing.


On recessed units to be surface mounted, punch new mounting holes in back of cabinet and use washers as doublers for additional strength. Spacer shims should be used between cabinet and framing to prevent distortion or damage to cabinet when screws are tightened.

Position cabinet with skirt into rough wall opening which has been framed accommodate installation of skirted semi-recessed or surface mounted unit. Secure cabinet to framing (either at side or back) with mounting screws.


Screw heads must not project above countersunk holes.

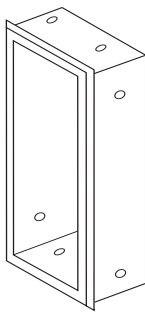

Recessed

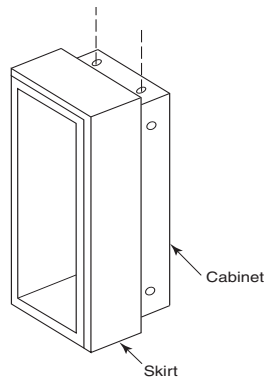

Semi-Recessed

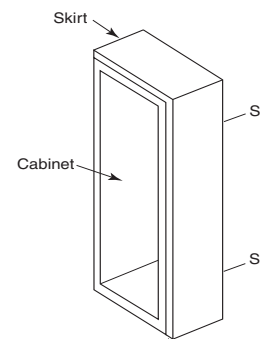

Surface-Mounted



BUILDING VALUE SINCE 1906

© 2025 by Bobrick Washroom Equipment, Inc.
Form No. CSD-487 r8/28/25

In the United States: BOBRICK WASHROOM EQUIPMENT, INC.

New York: 200 Commerce Drive, Clifton Park, NY 12065-1350 • Tel: (518) 877-7444 • Fax: (518)-877-5029

Los Angeles: 6901 Tujunga Ave, North Hollywood, CA 91605-6213 • Tel: (818) 982-9600 • Fax: (818)-503-9287 or email customerservice@bobrick.com

In Canada: BOBRICK WASHROOM EQUIPMENT COMPANY

45 Rolark Drive, Scarborough, Ontario M1R 3B1 • **Eastern Canada:** Tel: (877) 423-6555 • Fax: (877) 423-8555

• **Western Canada:** Tel: (877) 423-6444 • Fax: (877) 423-8444 or email customerservice@bobrick.com