




INSTALLATION INSTRUCTIONS

9225

9275

Strike Shims

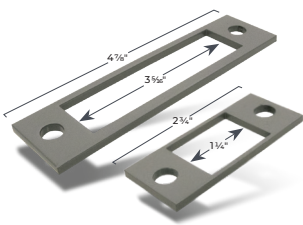

- ▶ UL Certified Solution for up to 180 Minute Fire Doors with Excessive Clearance Between Door and Frame Over $\frac{1}{8}$ ", up to $\frac{9}{16}$ "

1. Install Underneath Strike Plate Furnished with Lock Set

- ▶ Use with GAP 90, GAP90N, 9200, or 9750 to Achieve the Required Latch Engagement

Certified for Use in US and Canada



POSITIVE
PRESSURE TESTED
MISCELLANEOUS
FIRE DOOR
ACCESSORY

5.26

ngp.com
1-800-NGP-RUSH

FAX: (800) 255-7874

QUOTES: quotes@ngp.com

ORDERS: orders@ngp.com