



FP180-225

Frame Patch Kit

For the complete list of GapGuard Fire Door Accessories, the most up-to-date product information and installation instructions, scan the QR code or visit ngp.com.



INSTALLATION INSTRUCTION

The FP180-225 Frame Patch Kit is a 24-Gauge Steel Cover Plate that is Secured to the Existing Frame for Concealing Unused Holes and/or Cutouts. Rated for 180 Minutes.

Limitations & Allowances:

- ▶ Allowed to be Used on Steel Frames and Doors
- ▶ Allowed to be Installed on Jambs and Header
- ▶ Maximum Area of Cutout Concealed by Cover Plate is 2 ½ Sq. In.
- ▶ Must Maintain Adequate Coverage on All Sides of Cutout



Installation Procedure:


1. Cutout must be clean and free of oil and debris.
2. Wipe area around cutout.
3. Inspect Frame Patch Kit to ensure that toggle is within approximately 1/8" of the end of fastener.
4. Keeping cover plate on outside of cutout, insert toggle through cutout in frame (folding if needed to pass through cutout in frame).
5. After inserting through cutout, ensure toggle is fully open and engaged with frame.
6. Remove liner from tape on underneath side of cover plate.
7. Locate cover plate over cutout and press onto frame, ensuring adequate coverage on all sides of cutout.
8. Tighten fastener until head of fastener is flush with or inset below surface of cover plate.



FP180-225 INSTALLED
EXTERIOR OF FRAME



FP180-225 INSTALLED
INTERIOR OF FRAME

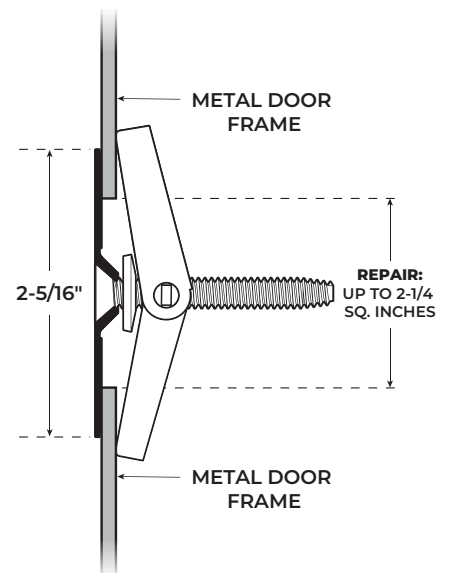

NGP-GAP-FP180-225-PRI-0625-A



MEMPHIS | CARSON CITY

NATIONAL GUARD PRODUCTS, INC.

MEMPHIS

4985 East Raines Road
Memphis, TN 38118

CARSON CITY

3689 Arrowhead Drive
Carson City, NV 89706

Fax: (800) 255-7874

Email: info@ngp.com

Quotes: quotes@ngp.com

Orders: orders@ngp.com

ngp.com
1-800-NGP-RUSH