


OUTSIDE LEVER HANDLE OR KNOB. INSERT MOUNTING POSTS THROUGH DOOR AND LOCK BODY ASSEMBLY THEN SECURE TO ADAPTER & PLATE ASSEMBLY USING (2) #8-32 SCREWS. FASTEN ESCUTCHEON TO DOOR WITH TRIM SCREWS.

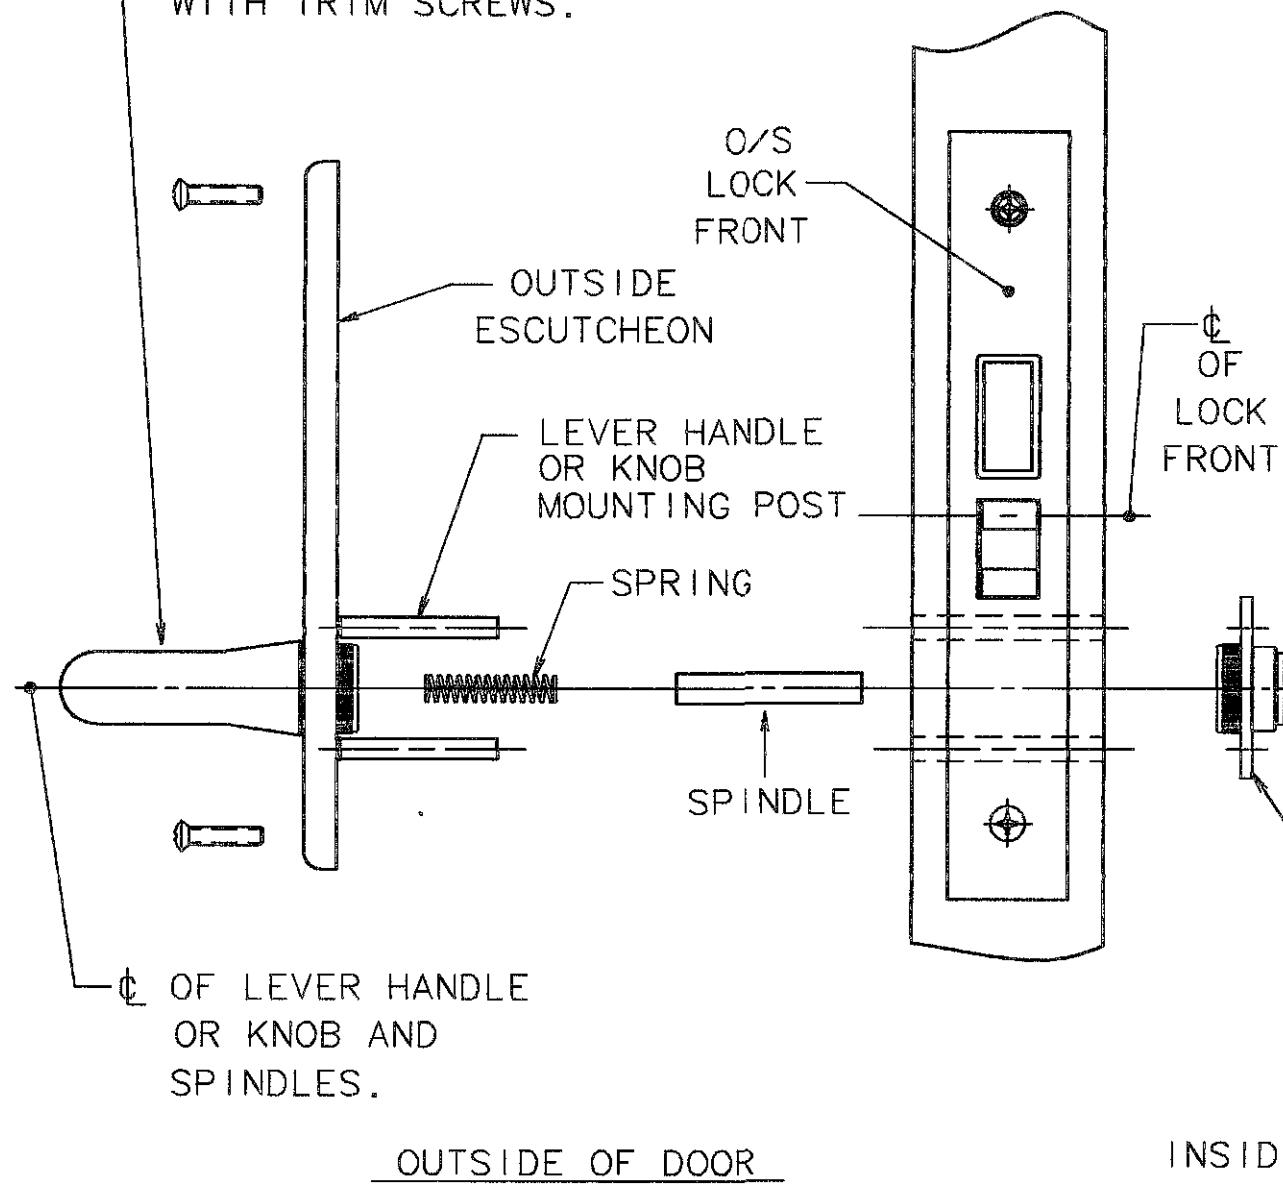

INSIDE ESCUTCHEON. PLACE OVER ADAPTER & PLATE ASSEMBLY THEN FASTEN TO DOOR WITH TRIM SCREWS.

#6-32 x 3/4" OVAL HEAD MACHINE SCREW (4 SCREWS FOR EACH ESCUTCHEON)

(B)

1/8 OF LOCK FRONT
#8-32UNC SCREW. TIGHTEN SECURELY TO LEVER HANDLE OR KNOB MOUNTING POST. (2 PLACES)

SPRING. INSERT INTO LEVER HANDLE OR KNOB. (BOTH SIDES)

SPINDLE. INSERT INTO LEVER HANDLE OR KNOB. (BOTH SIDES)

2 9/16" (B) 1 17/32 (TYP.)
6-32 CL.2 (B) THREAD (4 PL ON EACH SIDE OF DOOR) (SEE NOTE 2)

1 51/64 REF. 6 11/16 (B)
7 3/8"

3 11/32

SPINDLE HOLE (SEE NOTE 1)

2 3/4 REF. HANDLE SET SCREW. INSERT INTO INSIDE LEVER HANDLE AND TIGHTEN SECURELY TO ADAPTER.

INSIDE LEVER HANDLE OR KNOB. INSERT FULLY ONTO ADAPTER & PLATE ASSEMBLY AND SECURE WITH HANDLE SET SCREW.

② SUITABLE REINFORCEMENT REQUIRED FOR MOUNTING TRIM SCREWS.

① TO ASSURE CORRECT ALIGNMENT OF TRIM, SCREW HOLES MUST BE LOCATED IN RELATION TO SPINDLE HOLE AFTER LOCK BODY IS INSTALLED IN DOOR (REF. TEMPLATE #7057)

SARGENT & COMPANY

NEW HAVEN, CONN. 06511

RELEASE DATE
6 DEC 95
TEMPLATE: 7800 & 8200 MORTISE LOCK
ESCUTCHEON DESIGNS WT TRIM
(SURFACE APPLIED)

TEMPLET NO.
7055 B